


Osprey

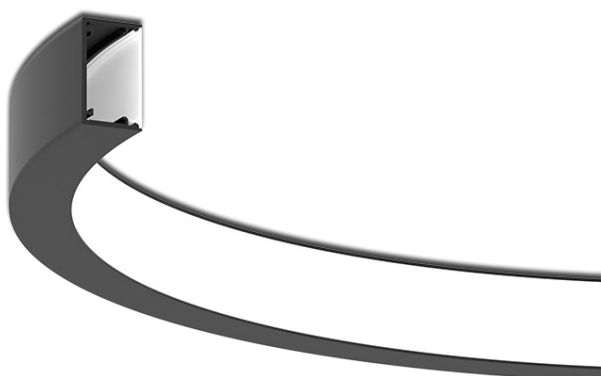

Please read these instructions carefully before commencing installation and retain for future reference. If in doubt, we advise that you consult a qualified electrician to install the product. These products must not be modified, if modification is made or product is not installed with these installation instructions it will invalidate the warranty and may render the product

Warning

1. For indoor use only.
2. If cable is defective, do not use or exchange the cable.
3. The light source of this luminaire is replaceable by the Manufacturer or approved agent.
4. We do recommend that a qualified electrician should be used to install the product.
5. Install in accordance with IEE Wiring regulations and current Building Regulations.
6. This light fitting should be connected to a fused circuit
7. If replacing an existing fitting, make a careful note of the connections.
8. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.


Important safety Notes

1. Switch off the electricity at the mains before commencing installation and remove the appropriate circuit fuse to avoid accidental switching on of the mains supply.
2. Make sure all connections are tight with no loose strands.
3. Ensure fire regulations are not breached when fitting your


Energy Rating

This product contains a light source with an energy rating of **E**


Installation - Surface

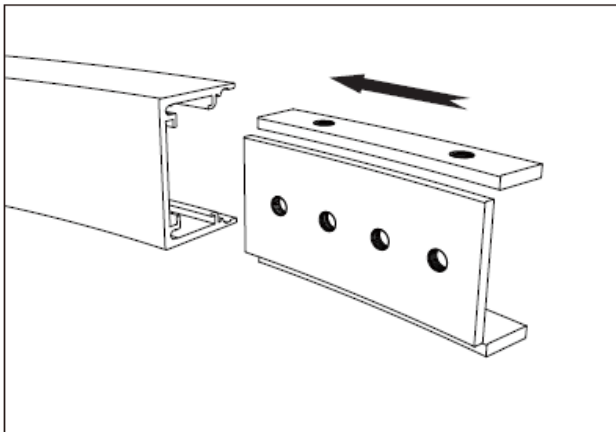


1. Install the joiners.

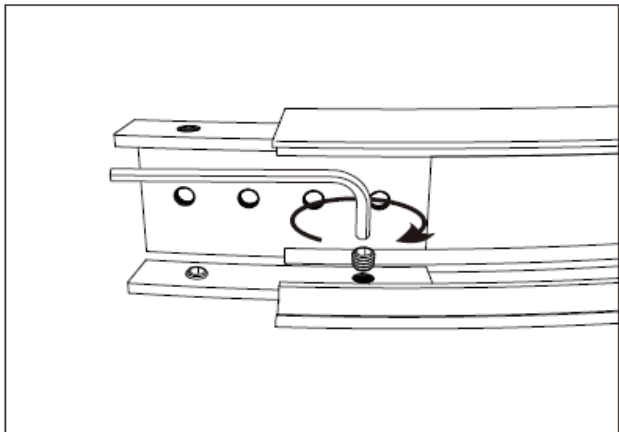

2. Lock the hexagon screws.

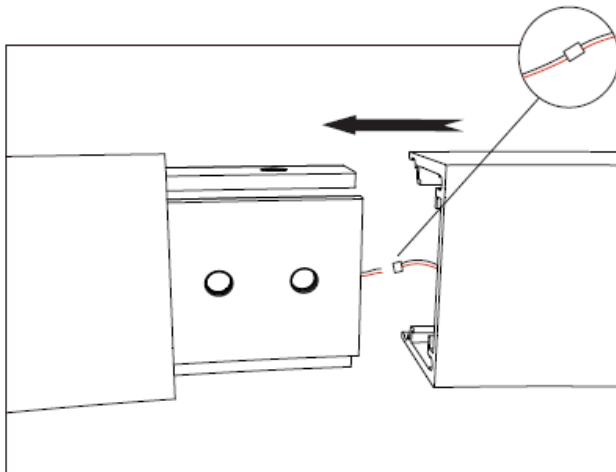


3. Connect the power wires and profiles.

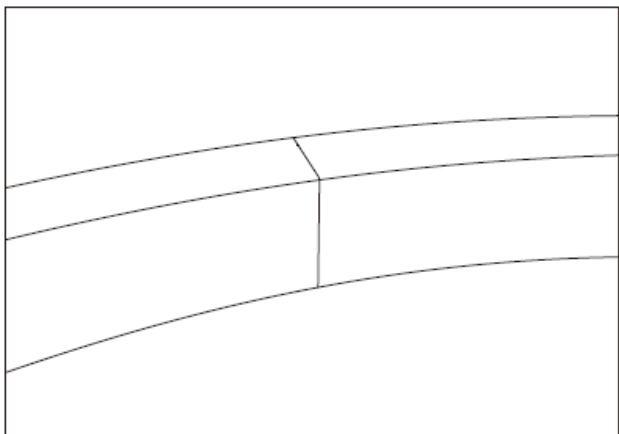


4. Connection finished.


Installation - Surface

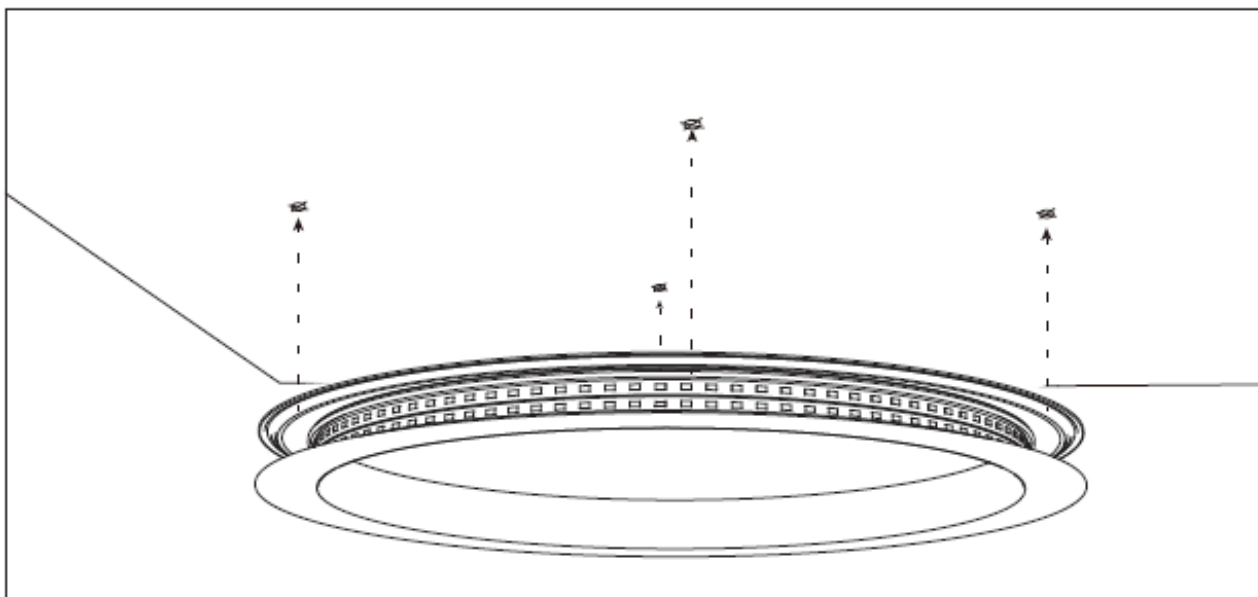


1. Determine the point positions on the ceiling.

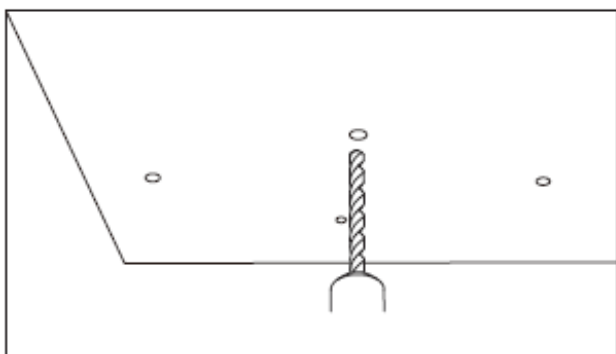

2. Drill holes in the ceiling.

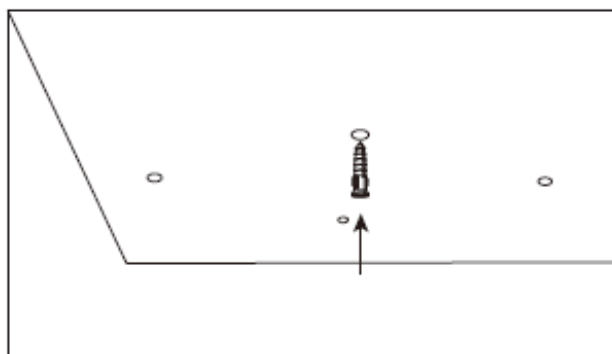


3. Lock the fixing screws properly.

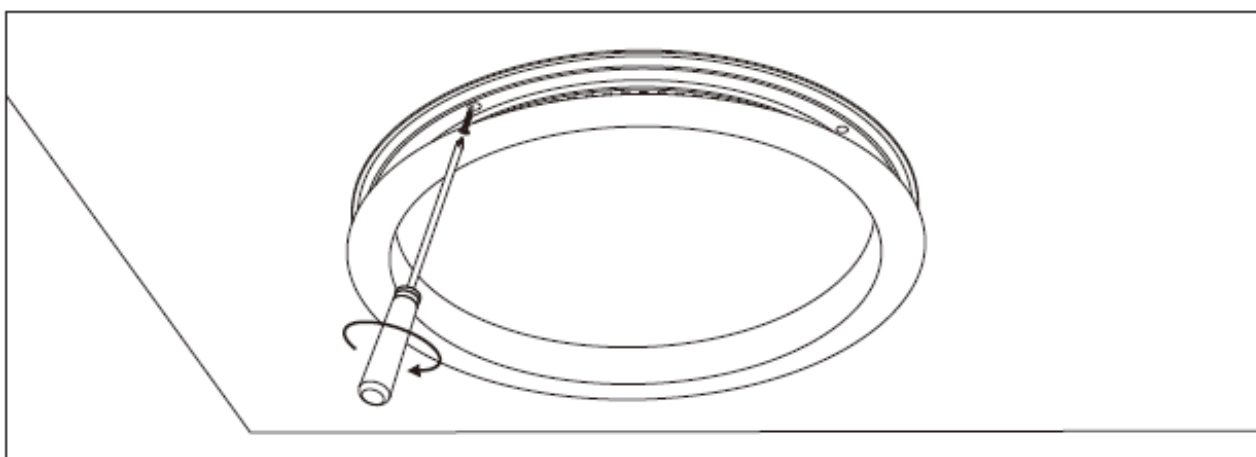


4. Tighten the screws.

Installation - Surface

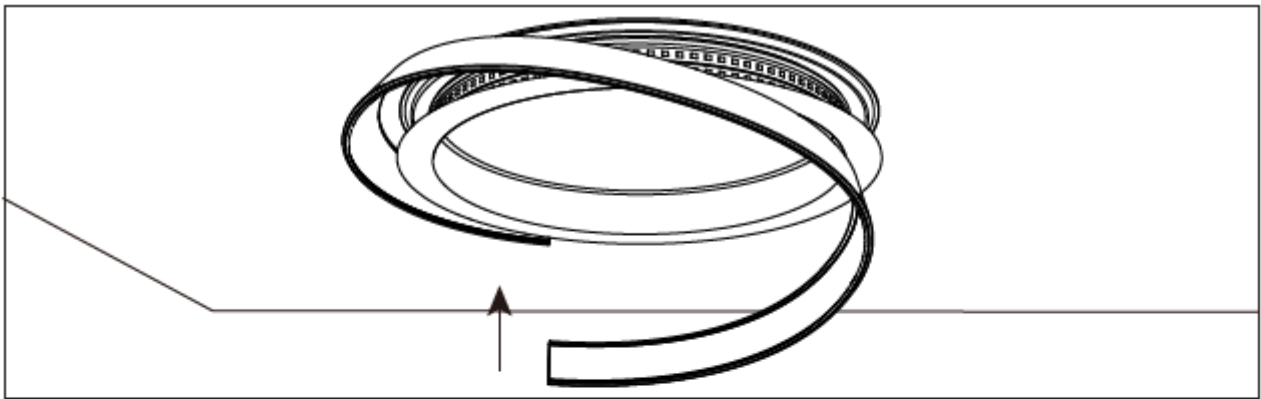


5. Install the diffusers.

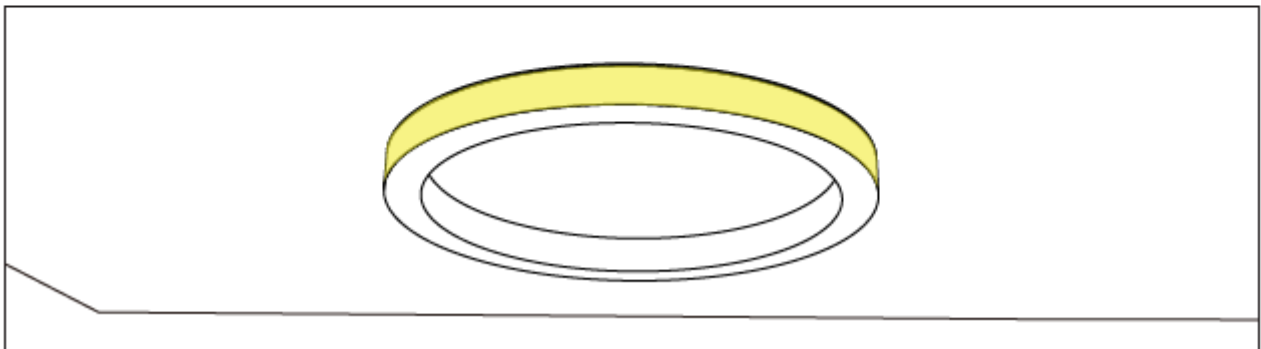


6. Installation completed.


Installation - Suspended

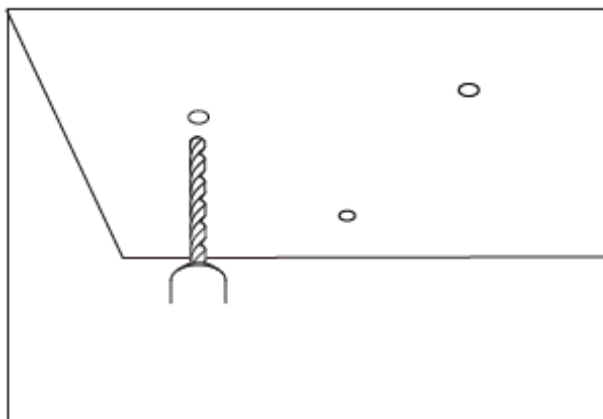


1. Drill holes in the ceiling.

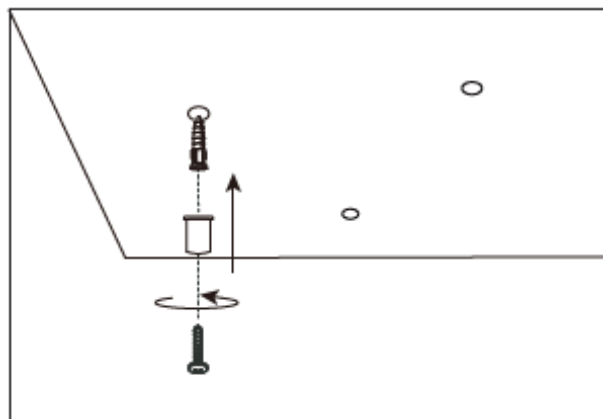


2. Lock the screws properly and install the suspension kits.

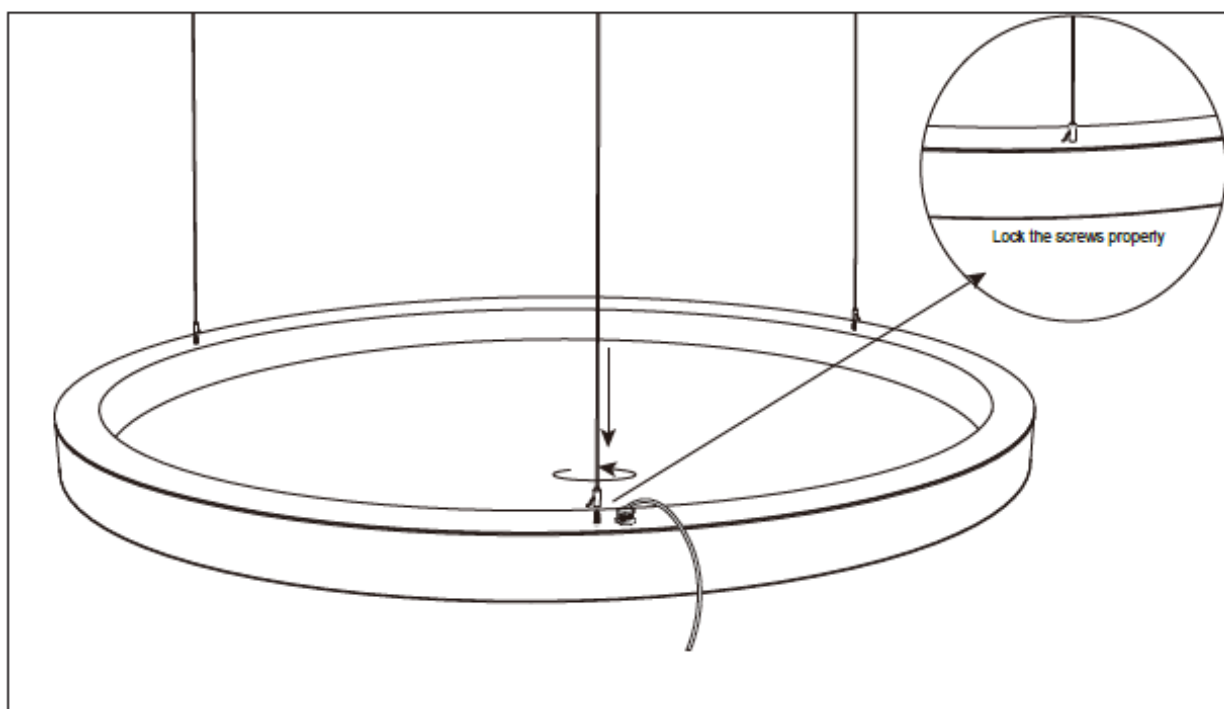


Installation - Suspended

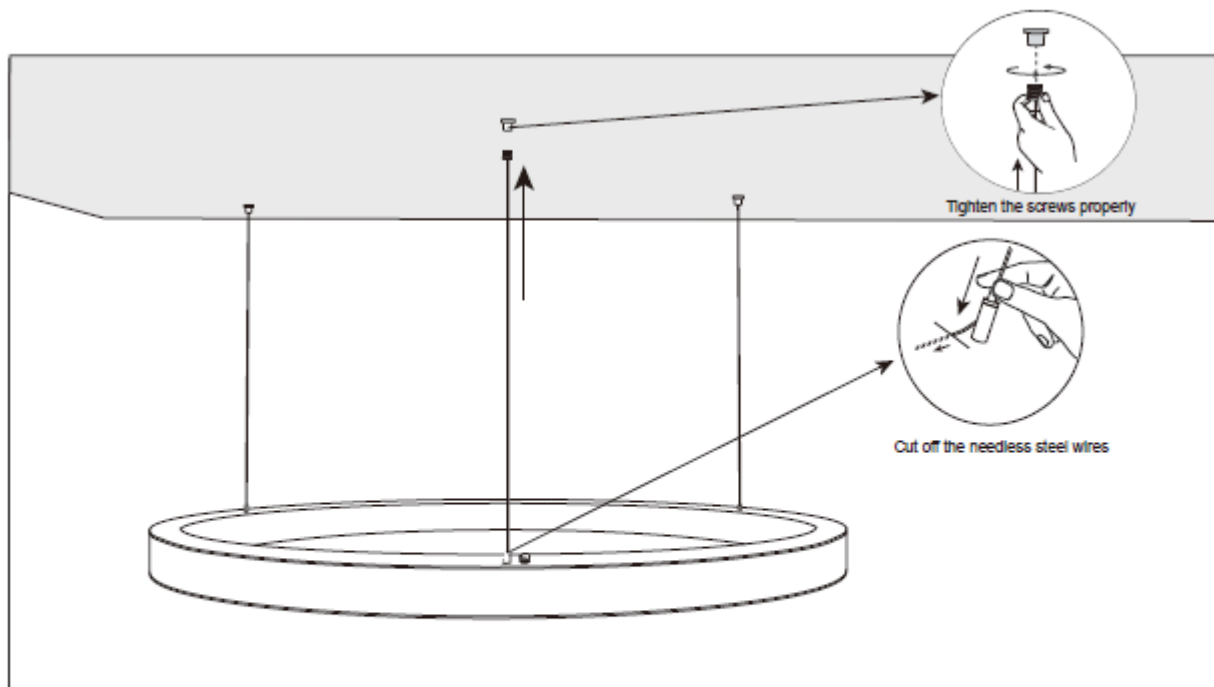


3. Suspension kit installation finished.

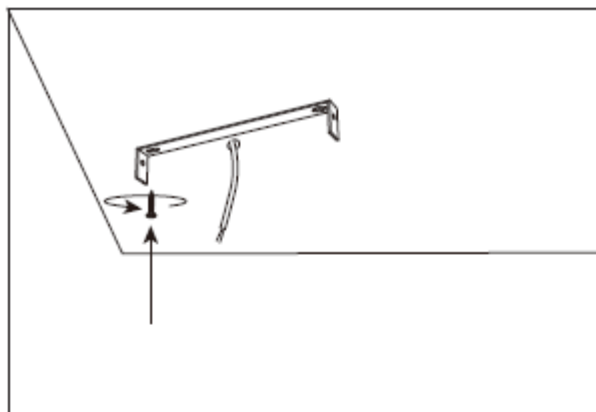

4. Drill two holes to install the ceiling rose.

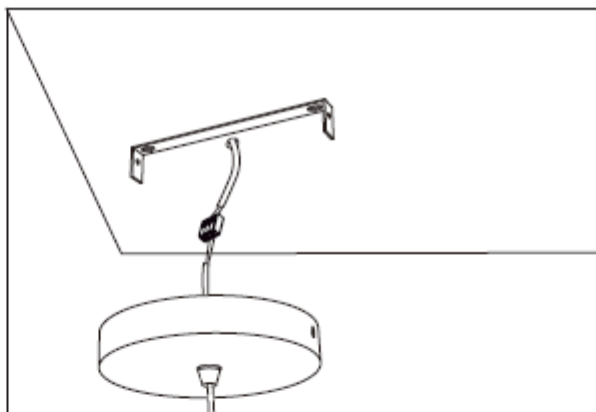


5. Connect power and wires.

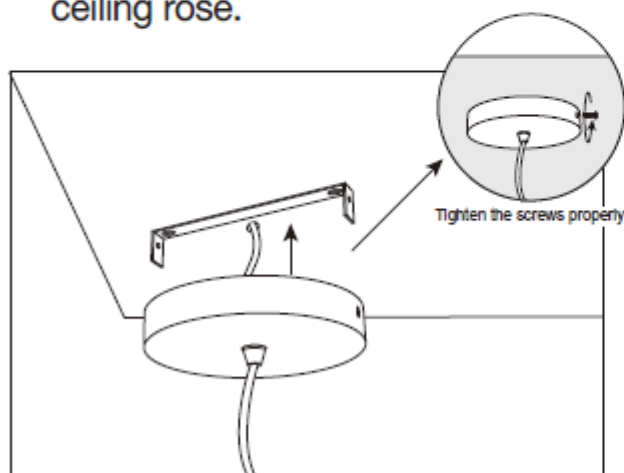

6. Put the ceiling rose on it.


Installation - Suspended

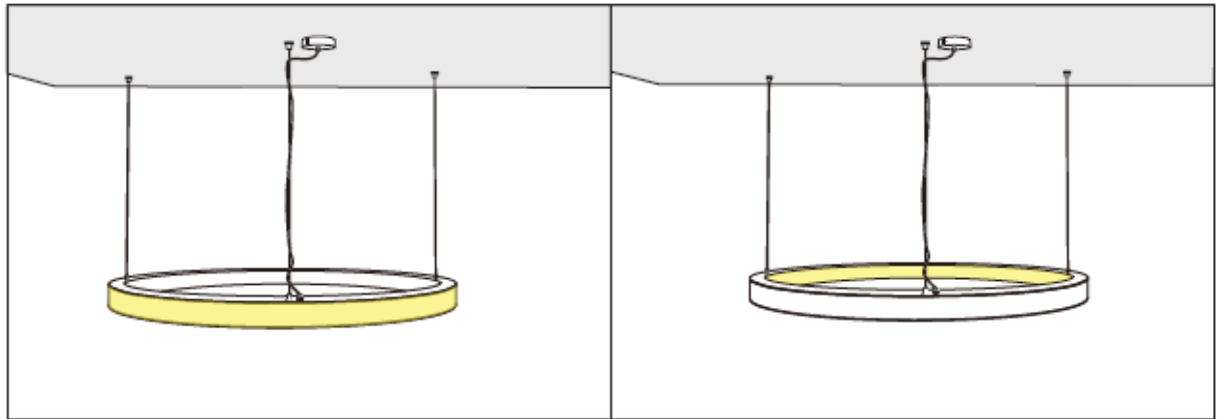


7. Installation completed.

Wiring


Standard

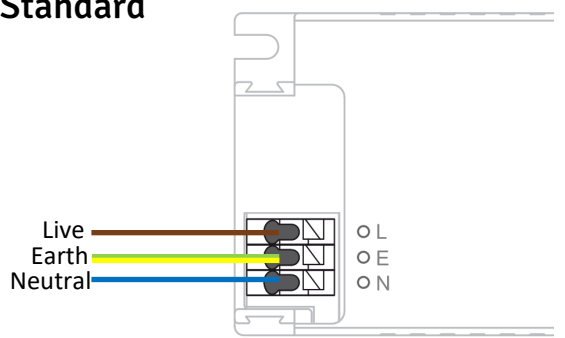

DALI (-DA)

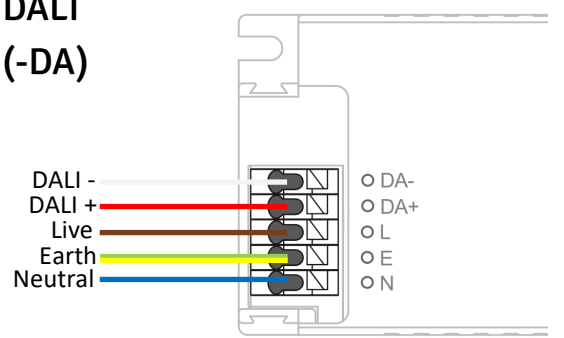

Standard EM (-E1)

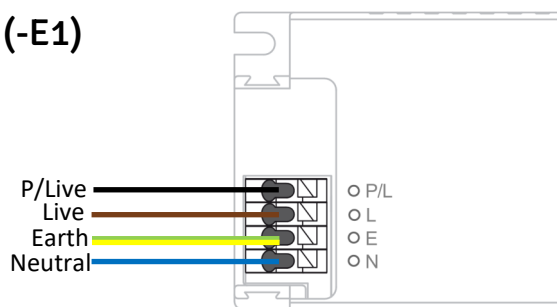

DALI EM (-E3)

